

## Components · P7 Pistol

### Part No. Designation

1	Slide
2	Front sight (height 5.7)
2.1	Front sight (height 5.9)
2.2	Front sight (height 6.1)
2.3	Front sight (height 6.3)
2.4	Front sight (height 6.5)
2.5	Front sight (height 6.7)
2.6	Front sight (height 6.9)
3	Drop safety catch
4	Elbow spring
5	Extractor
6	Pressure pin
7	Compression spring
8	Rear sight
9	Ring
10	Cylindrical pin
11	Compression spring
12	Compression spring
13	Firing pin
14	Bush
15	Clamping sleeve
16	Fixing pin
17	Compression spring
18	Clamping pin
19	Piston
20	Elbow spring
21	Trigger
22	Cylindrical pin
23	Sear

### Part No. Designation

24	Sear control lever
25	Catch lever
26	Ejector lever, compl.
27	Spring
28	Elbow spring
29	Locking pin
30	Clamping sleeve
31	Slide retaining catch
32	Compression spring
33	Cylinder head screw
34	Recoil spring
35	Receiver with barrel
36	Squeeze cocker
37	Drag lever
38	Rocker
39	Clamping sleeve
40	Cocking lever stop
41	Cocking latch
42	Compression spring
43	Elbow spring
44	Grip shell, left
45	Grip shell, right
46	Magazine catch
47	Magazine housing
48	Follower
49	Follower spring
50	Locking plate
51	Floor plate

