



1	Slide	28	Sear spring
2	Front sight (height 6.4 mm)	29	Rocker spring
2.1	Front sight (height 6.6 mm)	30	Rocker spring axle
2.2	Front sight (height 6.8 mm)	31	2 x Front sight / slide retainer pin
2.3	Front sight (height 7.0 mm)	32	Slide retainer
2.4	Front sight (height 7.2 mm)	33	Slide retainer spring
3	Drop safety catch	34	2 x Grip screw
4	Drop safety catch spring	35	Recoil spring
5	Extractor	36	Receiver with barrel
6	Extractor spring guide	37	Cover for trigger guard
7	Extractor spring	38	Squeeze cocker
8	Rear sight	39	Drag lever
9	Rear sight screw	40	Squeeze cocker axle
10	Firing pin collar	41	Rocker
11	Firing pin collar pin	42	Magazin catch axle
12	Inertia spring	43	2 x Stop pin
13	Firing pin spring	44	stop
14	Firing pin	45	Cocking latch
15	Firing pin bushing	46	Cocking latch spring
16	Piston pin	47	Squeeze Cocker spring
17	Piston detent	48	Grip, left
18	Piston detent spring	49	Grip, right
19	Piston retaining pin	50	Magazine catch
20	Piston	51	Magazine catch spring
21	Trigger spring	52	Magazine housing
22	Trigger	53	Follower
23	Trigger pin	54	Follower insert
24	Transmission lever	55	Follower spring
25	Disconnecter	56	Locking plate
26	Slide catch lever	57	Magazine floor plate
27	Sear bar		