



- |                              |   |
|------------------------------|---|
| <b>1 Slide</b>               | <b>25 Spring</b>                            |
| <b>2 Front sight</b>         | <b>26 El bow spring</b>                     |
| <b>3 Drop safety catch</b>   | <b>27 Bearingpin</b>                        |
| <b>4 El bow sprin</b>        | <b>28 Clamping sleeve</b>                   |
| <b>5 Extractor</b>           | <b>29 Stripping button</b>                  |
| <b>6 Pressure pin</b>        | <b>30 Compression spring</b>                |
| <b>7 Extractor spring</b>    | <b>31 Cylinder head screw</b>               |
| <b>8 Rear sight</b>          | <b>32 Recoil spring</b>                     |
| <b>9 Spacer ring</b>         | <b>33 Grip with barrel</b>                  |
| <b>10 Return spring</b>      | <b>34 Squeezecocker</b>                     |
| <b>11 Firing pin spring</b>  | <b>35 Drag lever</b>                        |
| <b>12 Firing pin</b>         | <b>36 Rocker</b>                            |
| <b>13 Cap</b>                | <b>37 stop</b>                              |
| <b>14 Piston spring</b>      | <b>38 Catch</b>                             |
| <b>15 Cylindrical pin</b>    | <b>39 Compression spring</b>                |
| <b>15.1 Clamping sleeve</b>  | <b>40 Elbowspring</b>                       |
| <b>16 Retarder piston</b>    | <b>41 Grip shell, left</b>                  |
| <b>17 Cylindrical pin</b>    | <b>42 Grip shell, right</b>                 |
| <b>18 Elbow spring</b>       | <b>43 Magazine catch</b>                    |
| <b>19 Trigger</b>            | <b>44 Magazine housing</b>                  |
| <b>20 Sear</b>               | <b>45 Follower</b>                          |
| <b>21 Cylindrical pin</b>    | <b>46 Followerspring</b>                    |
| <b>22 Disconnecter</b>       | <b>47 Follower spring locking<br/>plate</b> |
| <b>23 Slide catch lever</b>  | <b>48 Magazine floor plate</b>              |
| <b>24 Transmission lever</b> |   |