OPERATOR'S MANUAL

TELESCOPE SIGHT, RIFLE 4X MANIFICATION

NATO STOCK NO.: 1240-12-197-5192

HENSOLDT WETZLAR

SEPTEMBER 1985

Operating Instructions for Telescope Sight FERO-Z 24

Date: September 1985

	Table of Contents	
1	Description of Unit	Page
1.1	Designation	11
1.2	Purpose	_ 11
1.3	Scope of Supply	11
1.4	Technical Data	13
1.5	Construction	14
2	Operation	15
2.1	Transport	15
2.2	Operating Elements	15
2.3.	Putting Telescope Sight into	Operation
	and Boresighting	15
3	Maintenance	16

1 Description of Unit

1.1	Designation:	Telescope sight FERO-Z 24
1.1.1	Drwg. No.:	330148-0000.000
1.1.2	NATO Stock No. (set):	1240-12-196-6470
1.1.3	Designation of stock item:	TELESCOPE SIGHT, RIFLE,
		4x magnification, with acces
		sories
1.1.4	Developing firm:	M. HENSOLDT & SbHNE WETZLAR
		Optische Werke AG
1.1.5	Manufacturing firm:	M. HENSOLDT & SOHNE WETZLAR
		Optische Werke AG
4.0	D	

1.2 Purpose

The telescope sight is intended for use with the G3 rifle. It serves the rifleman for targeting and aiming and enables him to observe the enemy and the effect on the target even at a greater distance. The max. adjustable distance is 600 m. After consideration of the various ballistic

data the telescope sight can be mounted on any other handfire-arm using corresponding holders.

1.3	Scope of supply Scope of supply, drawing and the design of the telescope sig	NATO Stock Nos. change according to ht.
1.3.1	One telescope sight (Fig. 1) Drwg. No.: NATO Stock No.: Designation of stock item:	330148-9001.000 1240-12-197-5192 TELESCOPE SIGHT, RIFLE, 4x magnification
1.3.2	Two protective rubber caps (1) Drwg. No.: NATO Stock No.: Designation of stock item:	330148-9002.000 5340-12-198-3368 PROTECTIVE CAP, TELESCOPE SIGHT, rubber
1.3.3	One grey filter (6) Drwg. No.: NATO Stock No.: Designation of stock item:	330108-9003.000 1240-12-144-0715 FILTER, LIGHT, TELESCOPE SIGHT

1.3.4 One telescope-sight case with list of contents (20)
Drwg. No.:
NATO Stock No.:
Designation of stock item:

1.3.5 One tool bag with contents
Drwg. No.:
NATO Stock No.:

330148-9003.000
1240-12-302-4921
STORAGE CASE, TELESCOPE
SIGHT

335917-0000.000
1240-12-186-3404

1.3.5.1 One tool bag (23)

Drwg. No.:

NATO Stock No.:

comprising:

Designation of stock item:

Designation of stock item:

335917-8010.000 5140-12-146-5698 TOOL BAG

TOOL BAG, with contents

1.3.5.2	One screw driver (22) Drwg. No.: NATO Stock No.: Designation of stock item:	335917-8020.000 5120-12-121-1092 SCREW DRIVER, LONGITUDI NAL SLOT 4.5 x 40 mm blade, 100 mm long	1.3.6
1.3.5.3	One dust brush (21) Drwg. No.: NATO Stock No.: Designation of stock item:	TL 7920-0024-22 7920-12-120-0355 BRUSH, DUST, OBJECTIVE, squirrel hair, 10 mm dia., goose-quill holder	1.3.7
1.3.5.4	One optics cleaning cloth (24) Drwg. No.: NATO Stock No.: Designation of stock item:	TL 6640-003-80 x 115 6640-12-124-6982 CLEANING CLOTH, LENS, cotton 80 x 115 mm	

Drwg. No.: H & K 100236 or 100236/8

NATO Stock No.: 1240-12-140-9932 or 1249-12-160-0373

Manufacturing firm: Heckler & Koch, Oberndorf
Designation of stock item: HOLDER, TELESCOPE SIGHT, RIFLE

Sight holder (19)

3.7 One copy of operating instructions (on request)

1.4.1 Technical Data 1.4.1.1 Telescope magnification (V) 1.4.1.2 Entrance pupil diameter (EP) 1.4.1.3 Exit pupil diameter (AP) 1.4.1.4 Eye relief approx. 60 mm 1.4.1.5 Diopter setting - 0.5 to - 0.75 dpt (fixed) 1.4.1.6 Parallax-free for a distance of 1.4.1.7 Field of view angle 6 deg.^ 106.66 1.4.1.8 Field of view 105 m/1000 m 1.4.1.9 Reticle sighting thorn with side scale according to FINABLE grey (NG 4; 2.6 mm thick, approx. 94% absorption)	1.4.2.1 Elevation angle adjustment/ range adjustment
---	--

1.4.2.4	All telescope sights have been adjusted to the same point with range setting 1 and lateral setting 0	tolerance +/- 0.5	1.4.3.1 1.4.3.2 1.4.3.3		Telescope sight Telescope sight inclu Telescope sight inclu and accessories in ca	iding sight holder	approx. 0.30 kg approx. 0.62 kg approx. 1.00 kg	
1.4.2.5 1.4.2.6 1.4.2.7 1.4.2.8 1.4.2.9 1.4.2.10 1.4.2.11 1.4.2.12 1.4.2.13	Total length of telescope sight incl. protective rubber caps Protective rubber cap Tube Eyepiece/Objective Distance between optical axis and telescope sight support Telescope sight support Mounting screws Case (external dimensions) Distance between optical axis and axis of the bore (incl. sight holder)	226.5 mm 39.5 mm dia. 27 mm dia. 32.5 mm dia. 20.7 mm per STANAG 2324 M6; 10.5 mm long approx. 230 x 105 x 63 mm 87.5 mm	1.5 1.5.1	with a lesighting Optical The incithe first ed. The required ing systepiece for		For the elevation are rically. The trate the objective the reticle with the illuminated via the to two-element erection the first focal plane wed through the eyelection.	e (1) and are image e sighting thorn is e cylindrical lens (S cting lenses of the is imaged into the repiece (5). Option	ed into locat 9), if erect

1.5.3 Mechanical Structure (Fig. 3)

The objective and eyepiece sides of the tube (11) can both be provided with a protective rubber cap (10). Two mounting screws (13) are provided for mounting the sight on the holder.

- 1.5.3.1 The outer side of the tube accommodates the following components: elevation adjustment (12), lateral adjustment (14), guide bar (25) and telescope sight support (15) per STANAG 2324. Inside the tube the objective (1), the reticle (3), the eyepiece (5), and the erecting system (4) comprising the two two-element erecting lenses are arranged.
- 1.5.3.2 The protective caps (10) at the objective and eyepiece sides serve for protection against mechanical damage and are closed by inverting when the telescope sight is not in use.
- 1.5.3.3 The mounting screws (13) serve for screwing the telescope sight to the sight holder. They are provided with self-securing Nylock inserts.

2 Operation

- 2.1 Transport (Fig. 6)
 For transport and storage the telescope sight together with the sight holder and the accessories is put into the case (20).
- 2.2 Operating Elements
- 2.2.1 The reticle is designed according to Fig. 4. The reticle pattern consists of the sighting thorn with side scale per FINABEL.
 2.2.2 The elevation angle is adjusted by means of the elevation adjustment
- The elevation angle is adjusted by means of the elevation adjustment (12).
- 2.2.3 Lateral correction is effected by means of the lateral adjustment (14).2.2.4 The protective rubber caps (10) prevent mechanical damage.
- 2.2.5 The telescope sight is mounted on the sight holder (19) by means of the mounting screws (13) on the telescope sight support (15).2.2.6 The grey filter (6) to be inserted into the eyepiece protective cap serves
 - as anti-dazzle device.

2.3.2	Open protective rubber caps (10) at eyepiece and objective sides of telescope sight by inverting.			ing thorn is shifted in height and the elevation angle corresponding to the distance is adjusted.
2.3.3	In case of too much glare by sun or snow insert grey filter (6) into eye piece cap.) :	3	Maintenance
2.3.4	Set elevation adjustment (12) to 100 m (click 1) and lateral adjustment (14) to 0.	,		
2.3.5	Loosen countersunk screws (16) by means of screw driver (22).	9 3	3.1	Check optics for cleanliness. Clean dirty optics only with dust brush (21
2.3.6	Adjust sight on rifle to 100 m and aim at target 100 rn away via notch and bead sights.			arid optics cleaning cloth (24) after breathing on them; do not touch with fingers (dustbrush and optics cleaning cloth are part of accessories). Slight impurities (scratches) on the outer optical surfaces do not impair
2.3.7	Point sighting thorn of telescope sight at same target. For this purpose operate elevation (12) and lateral (14) adjustments using a coin. Make			function of the unit. However, cracked glass components have to be replaced (return unit for repair).
0.00	sure that settings as per 2.3.4 remain unchanged.		3.2	Remove dust and dirt from outer mechanical surfaces with a dry cloth c
2.3.8	Fire trial shots and readjust thorn after each shot if required. The turning direction for shot correction is indicated on the disks of the elevation and lateral adjustment (12 and 14).	1		brush. Remove coarse impurities (such as oil or grease) with a cloth moistened with gasoline. Clean moving parts and fitting surfaces partic
2.3.9	After adjustment re-tighten countersunk screws (16).)		ularly carefully.

2.3.10 Depending on target distance between 100 and 600 m set elevation

adjustment (12) to clicks 1 to 6 accordingly. At the same time the sight-

2.3

2.3.1

Putting Telescope Sight into Operation and Boresighting (Fig. 5)

Mount telescope sight (18) with sight holder (19) on rifle securely.

- 3.3 Check operating elements for easy motion. Slightly oil moving parts of sight holder using an acid-free oil.
- 3.4 Disinfect protective rubber caps. Moisten clean cloth with a disinfectant solution and wipe rubber parts.
- 3.5 Touch up varnish blemishes using an air-drying varnish per RAIL 90'05 after having clegreased the area.

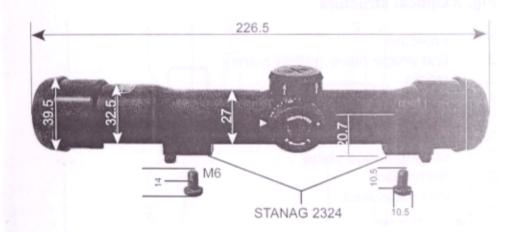


Fig. 1 Main dimensions of the unit

Fig. 2 Optical structure



- erecting system
- eyepiece grey filter
- second image plane
- 8. illumination
- 9. cylindrical lens

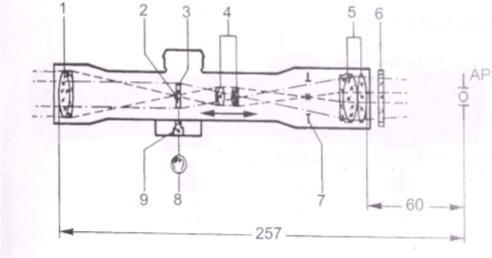


Fig. 3 FERO-Z 24



- 10. protective caps
 - tube
 - elevation adjustment
- 12. 13. M6 mounting screws
- lateral adjustment 14.
- telescope sight support 15.

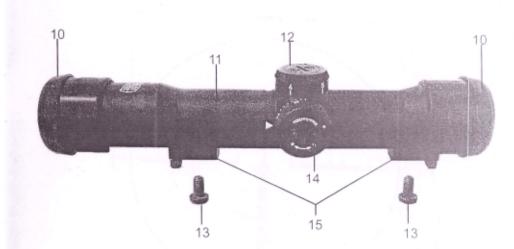


Fig. 4 Reticle pattern

Fig. 5 FERO-Z 24

View from the left

6 grey filter 10 protective caps

11 tube

12 elevation adjustment

14 lateral adjustment 16 countersunk screws

17 elevation adjustment ring

18 telescope sight 19 sight holder

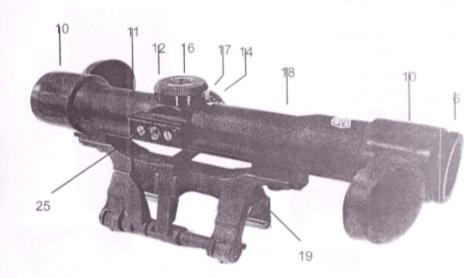


Fig. 6 FERO-Z 24

- 10 protective caps
- 18 grey filter
- 19 sight holder
- 20 storage case
- 21 dust brush 22 screw driver
- 23 tool had
- 23 tool bag
- 24 optics cleaning cloth

